

RELEASE NOTES FOR PATHPILOT V2.14.0

December 2025

ENHANCEMENTS

All

- We added an **Open** button for folders on the **File** tab, making it easier to navigate. (PP-4899)

Mills

- We added support for the EtherCAT 770MX mill.

FIXED ISSUES

All

- We fixed an issue where the **Alt+Shift+E** keyboard shortcut didn't reliably open the conversational editor. (PP-4946)

Mills

- We fixed an issue where some probing routines incorrectly labeled depth measurements as height. (PP-5044)
- We fixed an issue where the machine didn't wait for the spindle to reach speed after resuming a program when the door was previously opened. (PP-5119)
- We improved servo tuning to reduce the time required for 1500MX ATC tool tray rotation. (PP-5132)
- We fixed an issue where PathPilot imported DXF geometry incorrectly. (PP-5152)
- We added support for M264 and M265 M-codes on the EtherCAT 770MX mill to control the second 220 Vac switched outlet. (PP-5163)

MANAGE PATHPILOT VERSIONS

You don't need to install updates sequentially. You can update from any previous version to the current version of PathPilot. Depending on what you want to do, refer to the following sections:

- "Download and Install an Update File from the Controller" (below)
- "Install an Update File from a USB Drive" (on the next page)
- "Install a Previous Version of an Update File" (page 4)

DOWNLOAD AND INSTALL AN UPDATE FILE FROM THE CONTROLLER

1. Confirm that the PathPilot controller is powered on and out of **Reset** mode.
2. Downloading and installing an update file requires an Internet connection. From the **Status** tab, confirm that the **Internet** button LED light is on. (To configure the network, select the LED light.) Then, select **Update**.

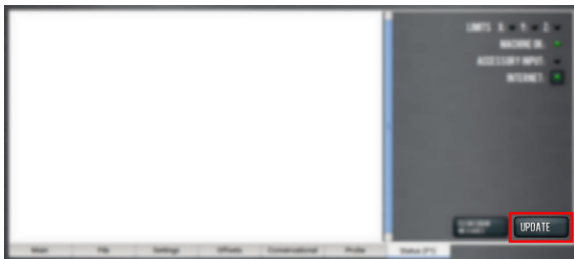 


Figure 1: Update button on the Status tab.

3. From the **Software Update** dialog box, select **Check Online**.

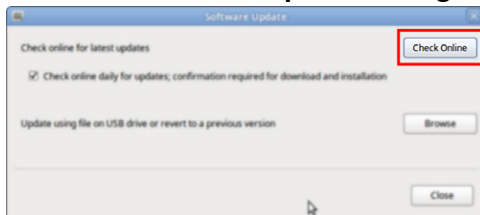 


Figure 2: Software Update dialog box.

4. Select **Install**.



Figure 3: Install button on the Software Update dialog box.

The update file is downloaded, and a notification dialog box displays.

5. From the dialog box, select **OK**.
The update file is installed on the PathPilot controller.
6. Follow the on-screen instructions to restart the PathPilot controller.

INSTALL AN UPDATE FILE FROM A USB DRIVE

INSTALL AN UPDATE FILE FROM A USB DRIVE

1. From the [PathPilot support center](#), download the most recent PathPilot update file.
2. Transfer the PathPilot update file to a USB drive.
3. Put the USB drive into the PathPilot controller.
4. Confirm that the PathPilot controller is powered on and out of **Reset** mode.
5. From the **Status** tab, select **Update**.



Figure 4: Update button on the Status tab.

6. From the **Software Update** dialog box, select **Browse**.

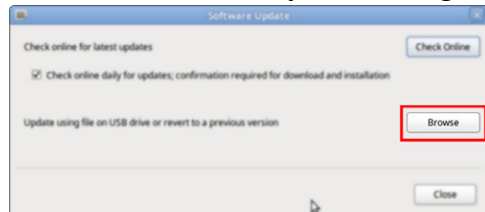 


Figure 5: Software Update dialog box.

7. From the **Browse** dialog box, select **USB**.



Figure 6: Browse dialog box.

8. Select the desired update file, and then select **Update**.
The update file is installed on the PathPilot controller.
9. Follow the on-screen instructions to restart the PathPilot controller.

INSTALL A PREVIOUS VERSION OF AN UPDATE FILE

INSTALL A PREVIOUS VERSION OF AN UPDATE FILE

1. Confirm that the PathPilot controller is powered on and out of **Reset** mode.
2. From the **Status** tab, select **Update**.



Figure 7: Update button on the Status tab.

3. From the **Software Update** dialog box, select **Browse**.

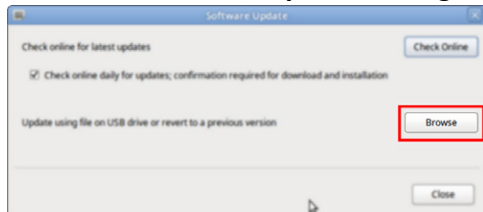 


Figure 8: Software Update dialog box.

4. From the **Browse** dialog box, select **Previous Versions**.

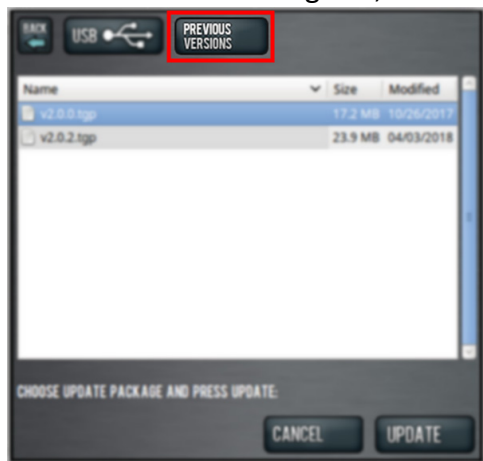 


Figure 9: Browse dialog box.

5. Select the desired update file, and then select **Update**.
The update file is installed on the PathPilot controller.
6. Follow the on-screen instructions to restart the PathPilot controller.